 
 


CORDLESS ROLLER BLIND FITTING INSTRUCTIONS

FITTING COMPONENTS

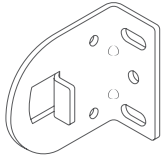

 
Pin side
bracket



Control side
mechanism



Pin side
mechanism



Screws: 5+
Rawl plugs: 5+



Roller blind
(will be packaged in shrink wrap)

FITTING HARDWARE



Metal tape
measure



Drill



Philips head
screwdriver



Stepladder



Drill bit



Pencil

WARNING

Do not free the roller blind with a knife or any object that may cause damage to the fabric.

 
1 FIXING THE BRACKET

The brackets can be 'face fixed' to the wall, 'top fixed' to the recess/ceiling or "side fixed" to the recess


If fitting outside a recess, we recommend the blind is positioned 100mm over the window and 100mm wider on each side.

If fitting inside a recess, the blind should be centered and fill as much of the window as possible (cutting may be required).


Ceiling fix

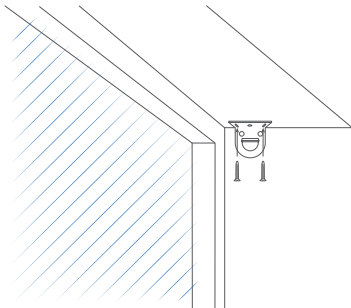

Side fix

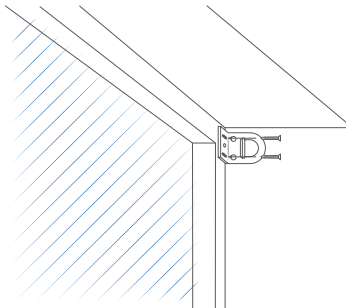 

Wall fix

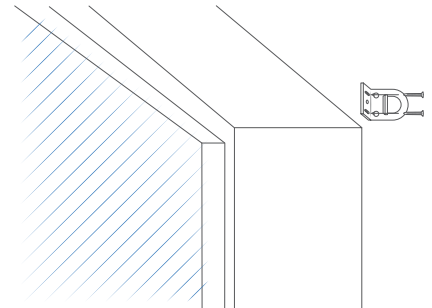 

2 INSTALLING THE BLIND

 
If the blind has been cut, reverse rolled or removed from the brackets, set the spring mechanism by turning the wheel on the spring end towards the+. This will be around 1 turn per 100mm of blind and hold it in place.

Slide the spring end onto the tab of its respective bracket.


Ensure the channel on the stop end is aligned with the tab on its respective bracket and ease it into place until it clicks.

Secure the bracket covers.

Spring Mechanism

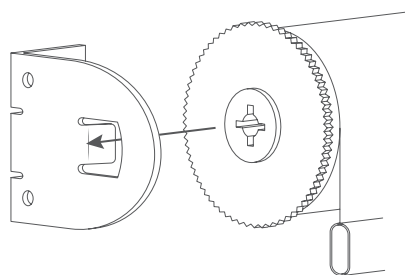


Stop End

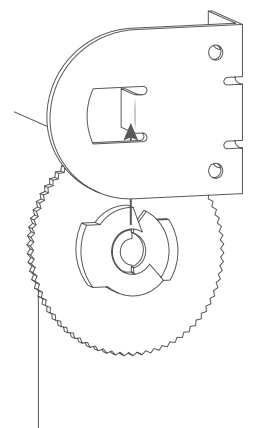 

3 ATTACHING THE HANDLE

 
In order to protect the fabric, use of the handle is recommended. Start by inserting the edge of the fabric inside the handle clip and slide the clip over the fabric pocket containing the bottom bar.

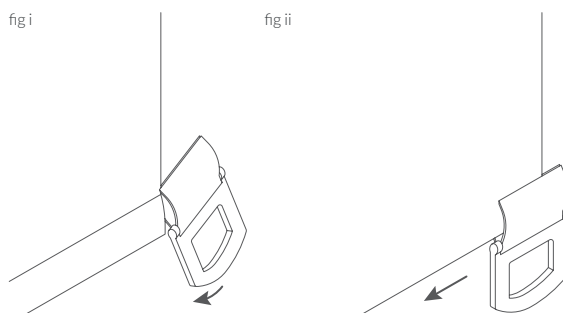

4 ATTACHING P-CLIPS

To adjust the speed of the rising blind, turn the spring end wheel (usually on the left, on the right if reverse rolled) toward the + for a faster motion or the - for a slower motion.

 With the blind fully open, adjust the final height of the fabric by turning the stop end wheel (usually on the right, on the left if reverse rolled) toward the + to lower it or the - to raise it. We recommend to leave around 100mm of fabric down when the blind is rolled up.

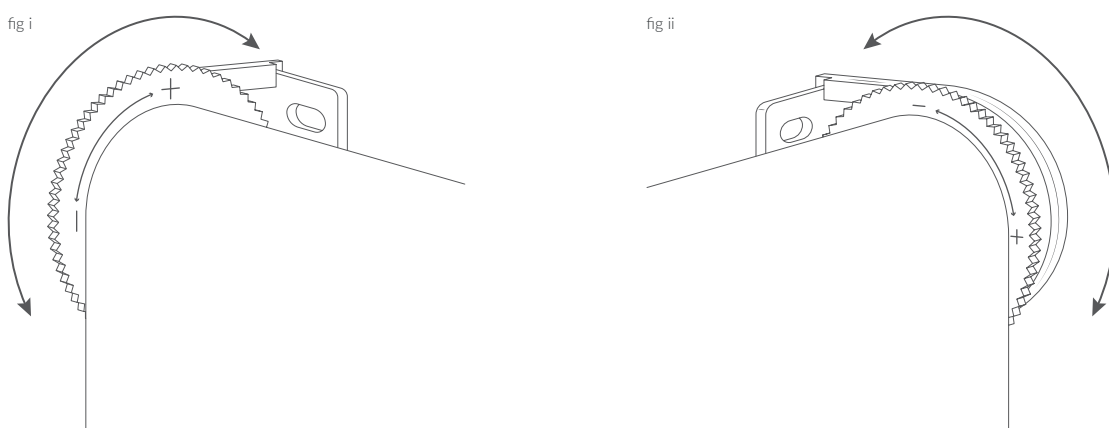

5 OPERATING THE BLIND

To close the blind simply pull the handle down slightly below the desired level and release. The blind will rise and rest in your set place.

To partially open the blind, pull the handle down, guide the blind up to the desired level, pull down slightly and release. The blind will rise and rest in your set place.

To fully open the blind, pull the fabric down and release the handle, the blind will automatically roll up.

