


# BLINDS DIRECT

DEFINED BY QUALITY


## UNO BLIND FITTING INSTRUCTIONS

### FITTING COMPONENTS


The assembly and installation of this product can be completed by non-professionals, in accordance with current trade and safety standards. Please consult a professional if any doubt exists.

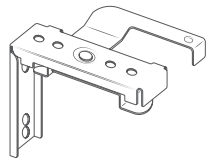


Top & Face fix brackets:  
Quantity to suit the length  
of blind

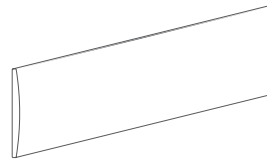

Valance

 

Child safety  
device

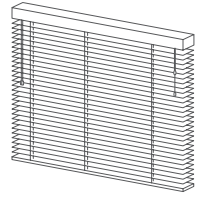

Blind

### FITTING HARDWARE



Metal tape  
measure



Drill



 
Philips head  
screwdriver



Stepladder



Drill bit



Screws &  
Rawl plugs




Pencil

### 1 INSTALL THE BRACKETS


The brackets provided with your blinds can be installed either as face-fixing (where the blinds are fitted to the side of the window recess) or top-fixing (where the brackets are attached to the top of your window recess).

Choose which type of fitting you wish to use, then position the bracket appropriately. If you have chosen face-fixing, then mark out the holes in the back of the bracket. For top-fixing mark out the hole in the back of the bracket. Once you have made the appropriate markings screw the bracket in place, using rawl plugs if fitting to the wall.

The headrail should not be installed at less than 1.5 metres from the floor.

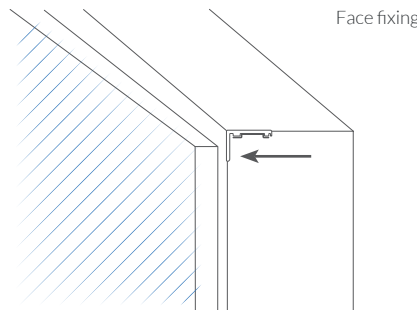


Face fixing

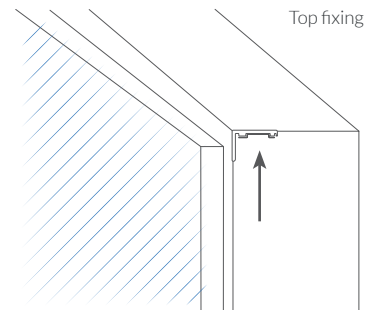

Top fixing


### 2 FIT THE HEADRAIL

Push the swing arm anti-clockwise as far as it will go, opening up the the bracket. Then insert the blind into the bracket by first easing the front lip of the headrail into place, then pressing the rest of the headrail firmly onto the bracket. When the blind is clipped onto the bracket, push the swing arm clockwise until it locks into place.

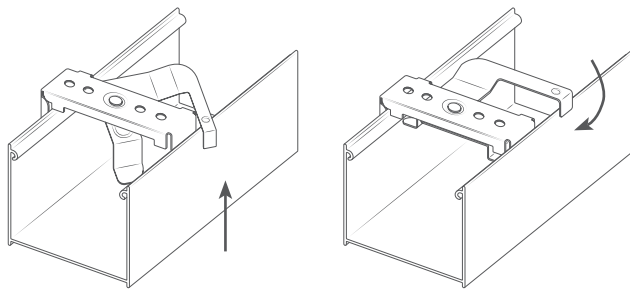

### 3 FIT THE VALANCE

Ensure that the brackets are not visible, attach the valance to the front of your blind. To do this, first hook the top of the valance over the top lip of the headrail. Then swing it down over the face of the headrail and clip the bottom of the valance to the underside of the headrail. Finally, test that it is secure by gently attempting to wiggle it.

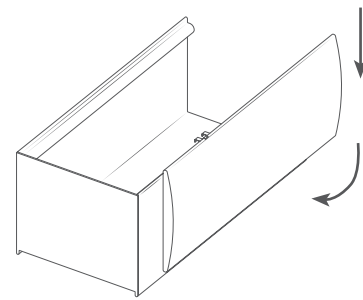

### 4 OPERATING THE BLIND

- There are two controls to operate your blind: a raise/lower control and a tilt control.
- To lower the blind release the cord by moving it to the left/right\* until the cord lock releases and gently let the cord slide through your fingers.
- To raise the blind pull the cord down until the blind is at the height you want. Move the cord to the left/right\* and the cord lock will lock automatically.
- Slats should be in the open position when raising or lowering the blind.
- To adjust the angle of the slats, operate the tilt wand as required.

\* Depending if left or right controls ordered.



Young children can be strangled by loops in pull cords, chains, tapes, and inner cords that operate the product. To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots, and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.

#### Child Safety Device (Safety Cleat)

The accumulation device shall be installed as close to the headrail as possible, and no less than 1.5m from the ground.

1. Use double sided tape, or similar, to stick the tensioning device to the wall temporarily while preparing to drill and screw permanently into place.
2. Always wrap all loose cords around the cleat in a figure of 8 pattern.

