

PRIME CURTAIN POLE FITTING INSTRUCTIONS

FITTING COMPONENTS



Wall Bracket



Pole Bracket



Finial



Curtain Pole




Screws
& Rawl Plugs

FITTING HARDWARE



Metal tape
measure

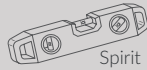

Spirit Level



Drill



Philips head
screwdriver



Stepladder



Drill bit




Pencil



Hacksaw


Using a spirit level, position the brackets on the wall and mark the top line.
We suggest 5 to 10cm above and to each side of the window recess;
to ensure maximum coverage
when the curtains are closed.

1

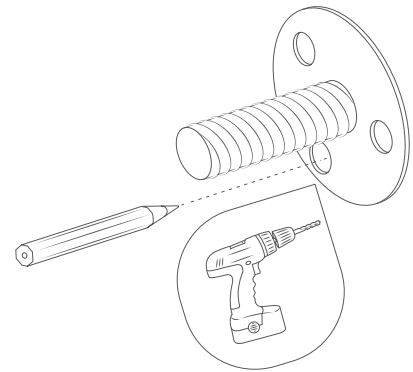


3


240CM - 420CM ONLY

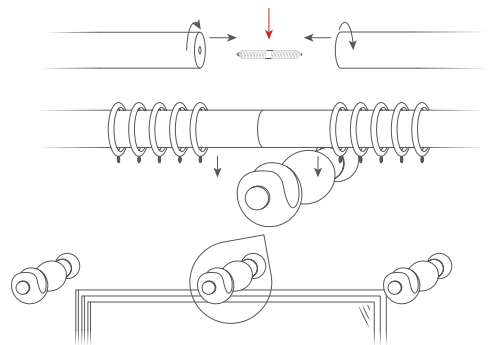

5

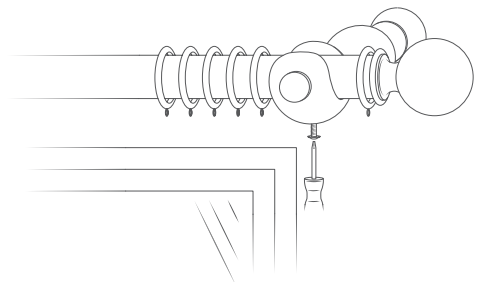

2

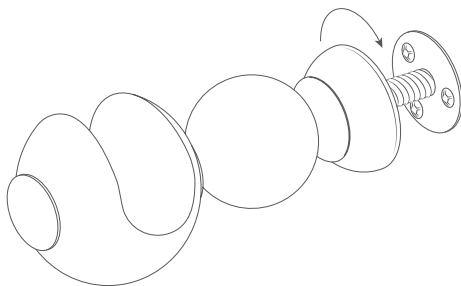

4

