BLINDS DIRECT

DEFINED BY QUALITY

PLEATED PERFECT FIT FITTING INSTRUCTIONS

FITTING COMPONENTS

Please check that you have all parts from the kit above, If any of the items are missing, please call 01924 481 717 or email info@ blindsdirect.co.uk


FITTING HARDWARE








Side frame x2



Top frame with blind & Bottom frame




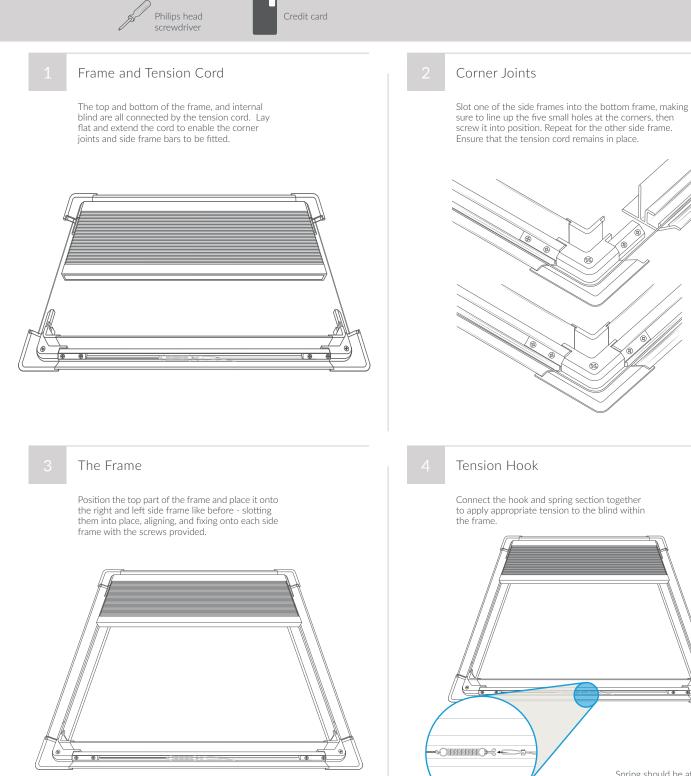

Spring should be attached like the below*

The Brackets

Measure 85mm distance from the corner of the frame up the side of the panel. You can do this simply by resting a credit card vertically on the frame. Line up the frame clip with the top of the credit card and then slot the clip into place, pushing the clip into the seal against the glass. Repeat this process for all four corners. For ease of insertion, you can use a lubricant, such as washing up liquid, on the base of each frame clip.

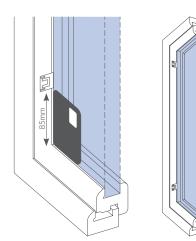



Once you have the four frame clips fixed into place, carefully slot the Perfect Fit blind onto the clips, pressing firmly until you hear a clicking sound.

